


E-Z-GO Shuttle 6

Included inside box:


- 2-64" aluminum rails
- 2-43" aluminum rails
- 1-35" aluminum rail
- 35-self-tapping sheet metal screws

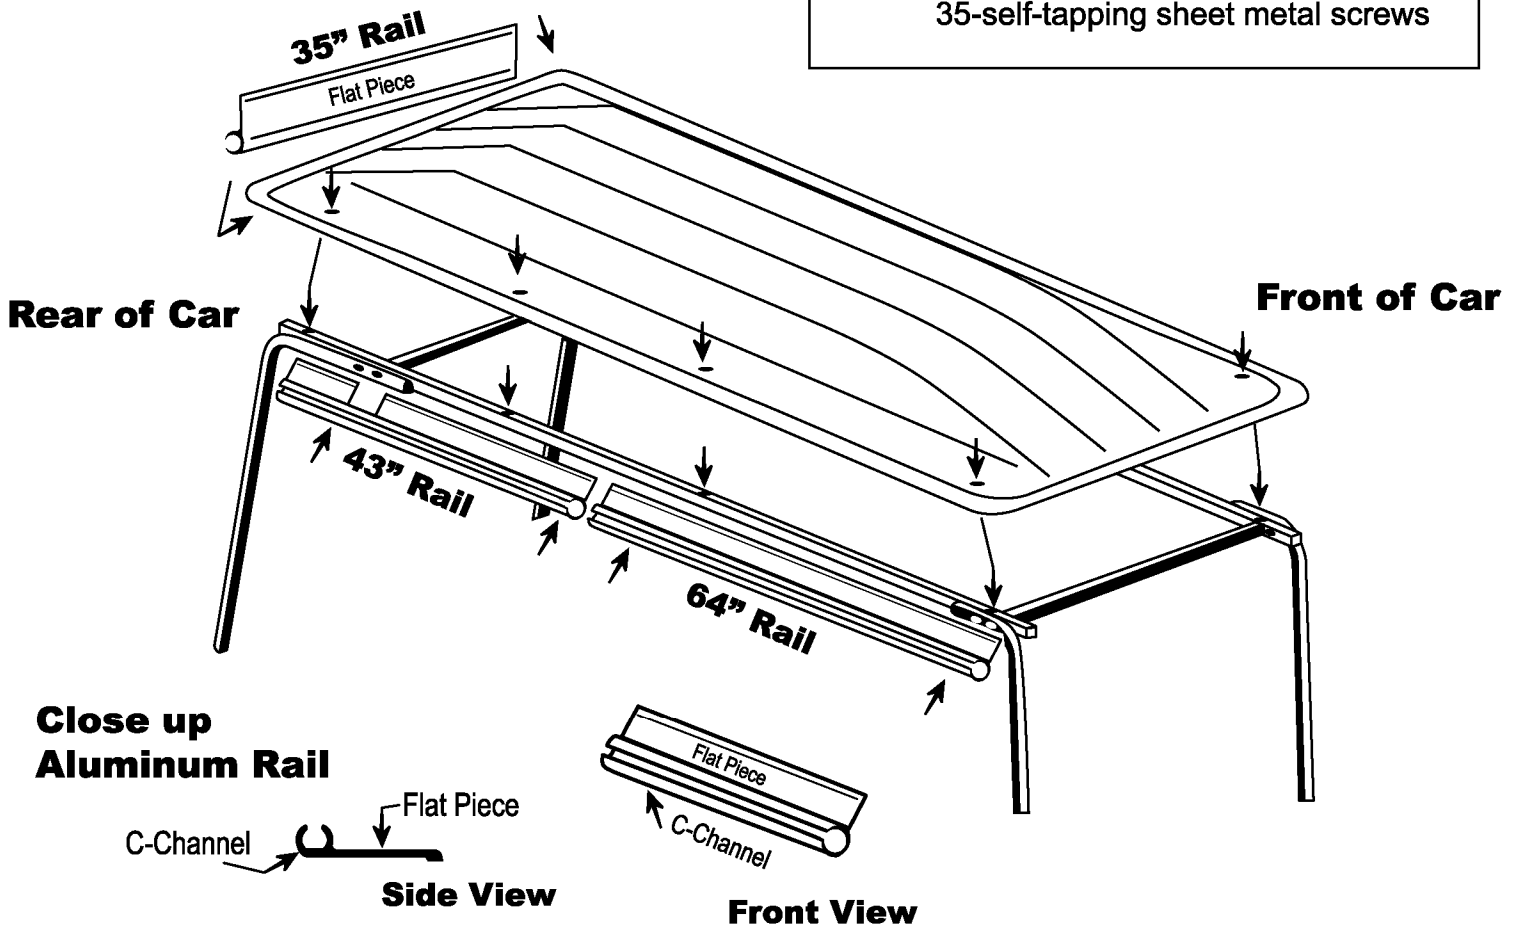

- 1) Remove aluminum rails and screws from tube received with enclosure.
- 2) Locate one 64" aluminum rail from windshield strut to the back of the car and mount to the aluminum top support with the self tapping screws. Repeat on the other side with the remaining 64" aluminum rail.
- 3) Take the 43" aluminum rail and with the notch towards the rear, abut to the 64" rail. Affix with self tapping screws. Be sure the notch fits around the 2 bolts for top attaching. Repeat on the other side with the remaining 43" aluminum rail. Once both rails are installed they should extend from the windshield strut to the rear of the car for a total of 107".
- 4) Next mount the 35" aluminum rail across the back of the roof using the self tapping screws.

You are now ready to install the rain enclosure by sliding the "bead" on the enclosure in through the mounted rails.



TITLE E-Z-GO Shuttle 6			REV -
 <small>A Textron Company</small>	DRN BY ORIG DATE	REV BY REV DATE	A DRAWING NO. 602738 PG. 1
	E-Z-GO DIVISION OF TEXTRON, INC., 1451 MARVIN GRIFFIN RD., AUGUSTA, GA. 30906-3852, 1-800-227-7029		