



Installation Instructions

CLUB CAR PRECEDENT

Track Enclosure

Hardware Included:

- (2) 35" Aluminum Rail
- (2) 44 3/4" Aluminum Rail

- (4) 1/2" White Spacers
- (4) 3/4" White Spacers

- (4) 2 1/4" Bolts
- (4) 2 5/8" Bolts

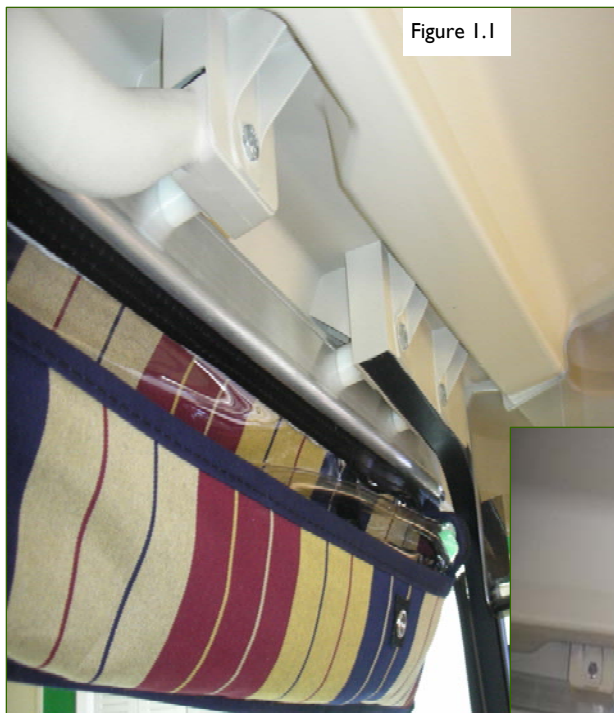


Figure 1.1

Side Curtains:

The 44" aluminum rails need to be mounted directly under the roof to the black posts and at the handholds where the bolts are attached. First, remove the bolts and line up the rail. The aluminum rails are predrilled where the bolts need to be reattached. Next, line up the rail, and reattach the bolts using the white spacers. The shorter spacers (1/2") go at the front and back bolts, and the longer spacers (3/4") are used at the middle bolts. The rail will be mounted with the "C"-channel facing *downward and outward*, and the flat side facing *upward and inward*. After all of the rails are installed, slide the beaded portions of the enclosure through the "C"-channels.



Figure 1.2



STRAIGHT BACK:

Mount the 35" aluminum rail across the back of the roof. We suggest using pop rivets. This rail will mount flat or horizontally, and the "C" will be facing downward and towards the front of the car. (Figure 2.1)



STRAIGHT/FULL BACK:

If your enclosure came with two backs, (a straight back and a full back) you will have received (2) 35" aluminum rails. If you have received these, they will mount the same as previously mentioned, but with one rail lying on top of another rail, and each "C" facing down. One "C" will be facing the front of the car and the other "C" will be facing the rear of the car.



At this point, your track style enclosure should be installed. Please keep in mind that there is not one specific way to install the enclosure, so please feel free to mount the enclosure where you feel it best fits and works for the customer. If there are any further questions, please do not hesitate to call us at (800) 365-1559. Thank you for purchasing a Tampa g enclosure!