



Installation Instructions

TOMBERLIN – EMERGE

2 Passenger Enclosure

Hardware included:

- (2) 40" Aluminum Rails
- (2) 36" Aluminum Rails

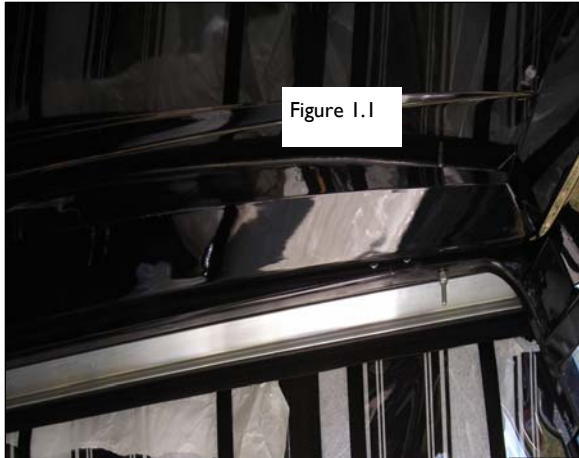


Figure 1.1

SIDE CURTAIN:

Mount one 40" aluminum rails on either side of the car roof by drilling 1/8" diameter holes thru the rail and roof. Use 1/8" pop rivets and put approximately 4 rivets in each side (Figure 1.1).

The front of the rail should be approximately 1/2" from the front post holding the windshield. The "C" opening should be facing "inward and down." Approximately 12" to 16" of the aluminum rail will be visible toward the front of the car (Figure 1.2).



Figure 1.2



Figure 2.1

STRAIGHT BACK - FULL BACK:

Mount the 36" rail across the back of the roof using the rear bolts that are used to mount the roof (Figure 2.1). This rail will mount flat or horizontal "C" will be facing downward (Figure 2.2).

If your enclosure came with two backs, you will have received 2-36" rails. If you received 2-36" rails, they will mount the same as previously mentioned, but with one rail lying on top of another rail, and each "C" facing down. One "C" will be facing the front of the car and one "C" will be facing the rear of the car.



Figure 2.2



2-36" RAILS



Full Back

At this point, your track style is installed. Please keep in mind that there is not one specific way to install the enclosure, so please feel free to mount the enclosure where you feel it best fits and works for the customer. If there are any further questions, please do not hesitate to call us at (800) 365-1559. Thank you for purchasing a Tampa g enclosure!